

Copyright © 2019 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.

PART NO. 10-107B

H7 LED HEADLIGHT

6/4/2019


FITMENT: HONDA GOLDWING GL1800, F6B, AND UNIVERSAL

PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING.**INSTALLATION:**

1. UNPLUG THE CONNECTOR FROM THE BACK OF THE HEADLIGHT BULB.
2. PULL THE OEM RUBBER BOOT FROM THE HEADLIGHT AND SET ASIDE.
3. RELEASE THE WIRE CLIP HOLDING THE BULB IN BY PUSHING IT IN AND DOWN ON THE LOWER LEFT SIDE.
4. REMOVE THE OEM BULB. *NOTE: DO NOT TOUCH THE GLASS ON THE BULB IN CASE YOU EVER WANT TO REUSE IT.*
5. TAKE THE LED BULB AND REMOVE THE MOUNT FROM IT BY HOLDING THE LIGHT AND PULLING THE RING STRAIGHT OUT.
6. PLACE THE MOUNT IN THE HEADLIGHT SOCKET AS SHOWN IN **FIG. 1**. MAKE SURE THE TAB IS AT THE TOP AND THE BLACK RING IS TO THE BACK OF THE BIKE.
7. LOCK THE WIRE CLIP AS SHOWN IN **FIG. 1**.
8. USING A SMALL UTILITY KNIFE REMOVE ABOUT A 1" DIAMETER AREA FROM THE CENTER OF THE RUBBER BOOT.
9. INSTALL THE OEM RUBBER BOOT BACK ONTO THE LIGHT HOUSING.
10. INSTALL THE LED LIGHT INTO THE MOUNT THROUGH THE RUBBER BOOT.
11. PLUG THE CONNECTOR ON THE LIGHT INTO THE BIKES CONNECTOR.
12. TEST LIGHT AND ADJUST AS NEEDED.

NOTICE

IGNORING THE CONTENTS OF THESE INSTRUCTIONS MAY AFFECT THE PRODUCT PERFORMANCE AND FUNCTIONALITY. NOT FOLLOWING THESE INSTRUCTION MAY CAUSE DAMAGE TO THE PRODUCT OR THE VEHICLE TO WHICH IT IS BEING ATTACHED.

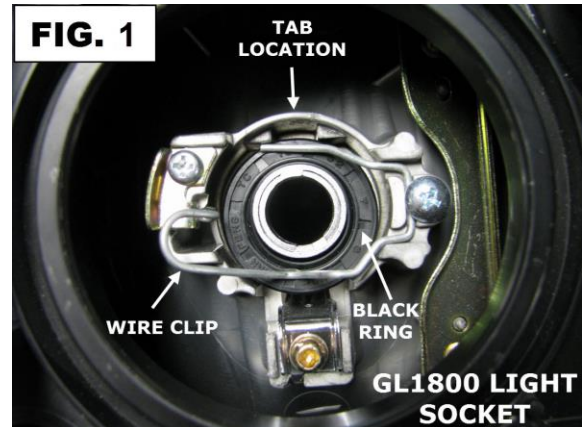

Copyright © 2019 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.

PART NO. 10-107B

H7 LED HEADLIGHT

6/4/2019

FITMENT: HONDA GOLDWING GL1800, F6B, AND UNIVERSAL

PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING.**INSTALLATION:**

1. UNPLUG THE CONNECTOR FROM THE BACK OF THE HEADLIGHT BULB.
2. PULL THE OEM RUBBER BOOT FROM THE HEADLIGHT AND SET ASIDE.
3. RELEASE THE WIRE CLIP HOLDING THE BULB IN BY PUSHING IT IN AND DOWN ON THE LOWER LEFT SIDE.
4. REMOVE THE OEM BULB. *NOTE: DO NOT TOUCH THE GLASS ON THE BULB IN CASE YOU EVER WANT TO REUSE IT.*
5. TAKE THE LED BULB AND REMOVE THE MOUNT FROM IT BY HOLDING THE LIGHT AND PULLING THE RING STRAIGHT OUT.
6. PLACE THE MOUNT IN THE HEADLIGHT SOCKET AS SHOWN IN **FIG. 1**. MAKE SURE THE TAB IS AT THE TOP AND THE BLACK RING IS TO THE BACK OF THE BIKE.
7. LOCK THE WIRE CLIP AS SHOWN IN **FIG. 1**.
8. USING A SMALL UTILITY KNIFE REMOVE ABOUT A 1" DIAMETER AREA FROM THE CENTER OF THE RUBBER BOOT.
9. INSTALL THE OEM RUBBER BOOT BACK ONTO THE LIGHT HOUSING.
10. INSTALL THE LED LIGHT INTO THE MOUNT THROUGH THE RUBBER BOOT.
11. PLUG THE CONNECTOR ON THE LIGHT INTO THE BIKES CONNECTOR.
12. TEST LIGHT AND ADJUST AS NEEDED.

NOTICE

IGNORING THE CONTENTS OF THESE INSTRUCTIONS MAY AFFECT THE PRODUCT PERFORMANCE AND FUNCTIONALITY. NOT FOLLOWING THESE INSTRUCTION MAY CAUSE DAMAGE TO THE PRODUCT OR THE VEHICLE TO WHICH IT IS BEING ATTACHED.

