

BIG BIKE PARTS®

Copyright© 2004 by Big Bike Parts, Inc.
No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.

INSTALLATION INSTRUCTIONS

PART NO. 20-610 WINDSHIELD
PART NO. 20-610T YAMAHA VENTURE
1999-2000

Revised 8/14/2017

ITEMS REQUIRED: 3 MM ALLEN WRENCH

1. REMOVE (2) 3 MM ALLEN SCREWS ON INSIDE UPPER CORNERS OF FAIRING. SEE FIG. 1. REMOVING THESE (2) SCREWS ALLOW YOU TO TAKE OFF THE WINDSHIELD GARNISH TRIM PIECE FROM THE FRONT OF THE FAIRING.
2. THEN REMOVE THE (6) 3 MM ALLEN SCREWS THAT HOLD THE WINDSHIELD ONTO THE FAIRING.
3. INSTALL NEW WINDSHIELD BY REVERSING STEPS 1 & 2.

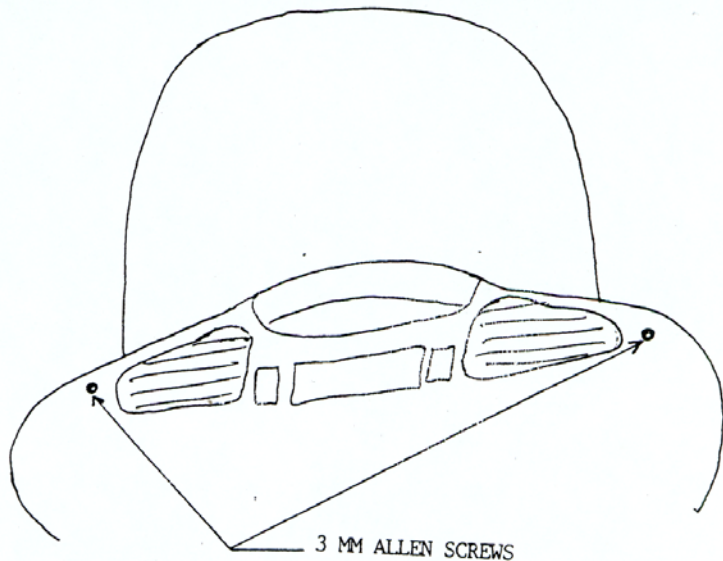


FIG. 1

BIG BIKE PARTS®

Copyright© 2004 by Big Bike Parts, Inc.
No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.

INSTALLATION INSTRUCTIONS

PART NO. 20-610 WINDSHIELD
PART NO. 20-610T YAMAHA VENTURE
1999-2000

Revised 8/14/2017

ITEMS REQUIRED: 3 MM ALLEN WRENCH

1. REMOVE (2) 3 MM ALLEN SCREWS ON INSIDE UPPER CORNERS OF FAIRING. SEE FIG. 1. REMOVING THESE (2) SCREWS ALLOW YOU TO TAKE OFF THE WINDSHIELD GARNISH TRIM PIECE FROM THE FRONT OF THE FAIRING.
2. THEN REMOVE THE (6) 3 MM ALLEN SCREWS THAT HOLD THE WINDSHIELD ONTO THE FAIRING.
3. INSTALL NEW WINDSHIELD BY REVERSING STEPS 1 & 2.

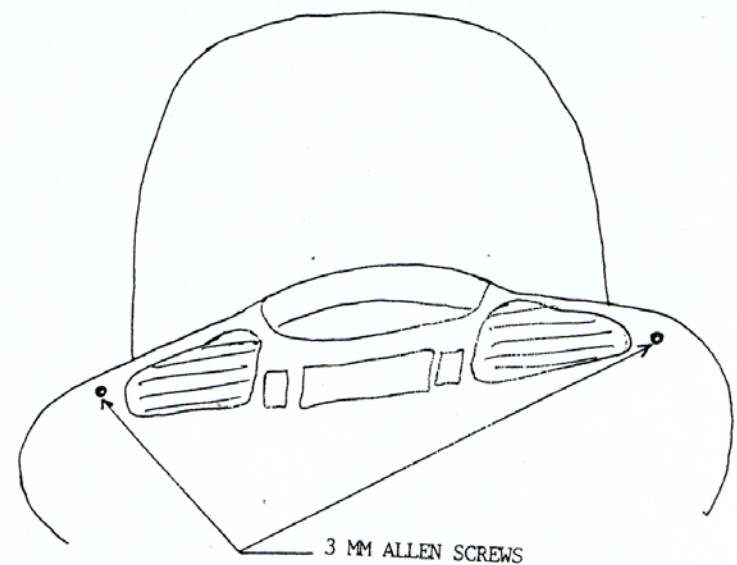


FIG. 1