BIG BIKE PARTS

 ${\sf Copyright}^{ \hbox{\it CO}} \ 2019 \ by \ {\sf Big} \ {\sf Bike} \ {\sf Parts}, \ {\sf Inc.} \ {\sf No} \ {\sf part} \ {\sf of} \ {\sf this} \\ {\sf instruction} \ {\sf sheet} \ {\sf may} \ {\sf be} \ {\sf reproduced} \ {\sf without} \ {\sf the} \ {\sf written} \\ {\sf permission} \ {\sf of} \ {\sf Big} \ {\sf Bike} \ {\sf Parts}, \ {\sf Inc.} \\ \\$

INSTALLATION INSTRUCTIONS

PART NO. 21-354 BEACHCOMBER HIGHWAY BOARDS

FITMENT: HONDA GOLDWING/GOLDWING TOUR 2018-NEWER


TOOLS NEEDED: 5MM ALLEN WRENCH 6MM ALLEN WRENCH 3MM ALLEN WRENCH 8MM ALLEN WRENCH REMOVABLE THREAD LOCK


PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING. *USE REMOVABLE THREAD LOCK ON ALL FASTENERS* ESTIMATED INSTALLATION TIME: 45 TO 60 MIN.

INSTALLATION:

3/19/2019

- 1. STARTING ON THE LEFT SIDE OF THE BIKE, REMOVE THE TWO SCREWS IN FIG. 1. PULL FORWARD ON THE LEFT FOG LIGHT COVER TO REMOVE IT.
- 2. USE A 5MM ALLEN WRENCH TO REMOVE THE TWO ALLEN SCREWS IN THE LEFT LOWER COWL (FIG. 2).
- 3. PULL BACK SLIGHTLY ON THE REAR OF THE LEFT LOWER COWL TO RELEASE IT.
- 4. USING FIG. 3 AND FIG. 5 FOR REFERENCE, CAREFULLY RELEASE THE LEFT LOWER COWL TAB FROM THE LOWER SHROUD.
- 5. RELEASE THE RUBBER GROMMET IN THE CENTER OF THE LEFT LOWER COWL (FIG. 4).
- 6. SLIGHTLY PULL OUT ON THE BACK AND BOTTOM OF THE LEFT LOWER COWL AND SLIDE IT FORWARD AND OUT TO RELEASE THE TAB HOLDING THE FRONT OF THE LOWER COWL. REMOVE THE LEFT LOWER COWL AND PLACE IT ON A CLEAN TOWEL OR SOFT SURFACE TO AVOID SCRATCHING.
- 7. REMOVE THE TWO CLIPS FROM THE ENGINE GUARD COVER (FIG. 5 SHOWS INSIDE OF THE LEFT LOWER COWL) CLIPS WILL NOT BE REUSED.
- 8. PRESS THE THREE TABS INSIDE THE LOWER COWL TO RELEASE THEM AND REMOVE THE ENGINE GUARD COVER. COVER WILL NOT BE REUSED.
- 9. PLACE ONE OF THE CLAMP TOPS ON THE ENGINE GUARD AS SHOWN IN FIG. 6.
- 10. REPEAT STEPS 1 THROUGH 6 IN REVERSE ORDER.
- 11. REFERENCE FIG. 6 TO INSTALL THE CLAMP BOTTOM AND THE LEFT BEACHCOMBER HIGHWAY BOARD. (DO NOT TIGHTEN. CLAMP CAN MOVE FORWARD OR BACK SLIGHTLY TO ADJUST POSITION/ANGLE OF THE BOARD.) ONCE IT IS IN PLACE, TIGHTEN ALL BOLTS AND THE SET SCREW.
- 12. REPEAT ON THE RIGHT SIDE OF BIKE.

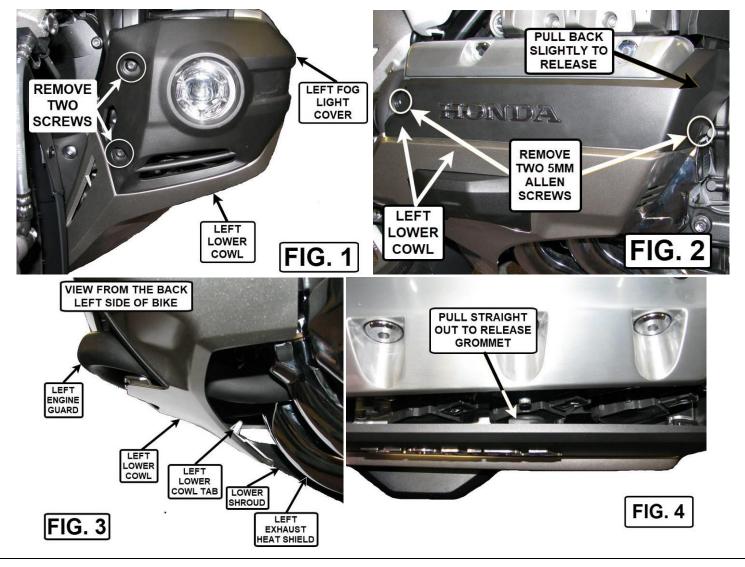

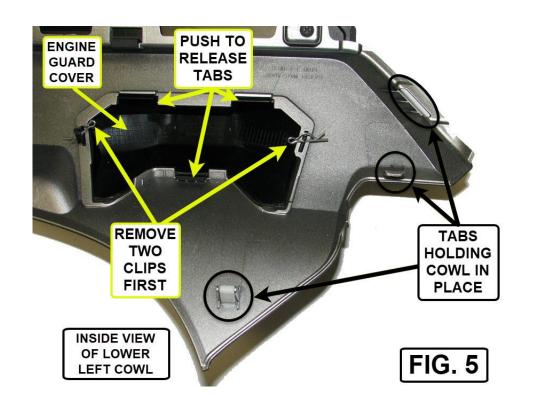

NOTICE

THIS SET CONTAINS EXTRA HARDWARE ITEMS THAT WILL NOT BE USED FOR THIS INSTALLATION

