

Copyright© 2005 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts Inc.

52-651 LED Front Fender Accent
Amber Lens Amber Mini LED's
52-751 LED Front Fender Accent
Clear Lens Amber Mini LED's
FITS GL1800 GOLDWING

Revised 2/16/09


TOOLS REQUIRED:

WIRE CRIMPER
DRILL AND 1/8" BIT

5MM ALLEN WRENCH
RUBBING ALCOHOL

INSTALLATION:

1. USING 5MM ALLEN WRENCH REMOVE THE FOUR OEM SCREWS (1A) FROM FENDER, AND REMOVE FENDER.
2. FIT THE MEDALLION TO THE BIKE ON THE FRONT TIP OF THE FENDER. MAKE SURE IT IS CENTERED. MARK A SPOT ON FENDER TO DRILL HOLE FOR WIRES.
3. DRILL A 1/8" HOLE AT MARK ON FENDER.
4. CLEAN THE SPOT FOR THE MEDALLION WITH RUBBING ALCOHOL.
5. REMOVE THE BACKING FROM THE TAPE ON BACK SIDE OF MEDALLION. RUN THE WIRES THROUGH THE HOLE AND STICK THE PART TO THE BIKE. (THERE IS ONLY ONE CHANCE TO GET THE MEDALLION IN THE CORRECT SPOT.)
6. RUN THE WIRES UP THE FENDER AND TAPE THEM TO THE FENDER.
7. CONNECT THE WIRES TO A SWITCH OR TAP INTO WIRES ON THE BIKE. (MAY NEED TO LENGTHEN WIRES).
8. REINSTALL FENDER.

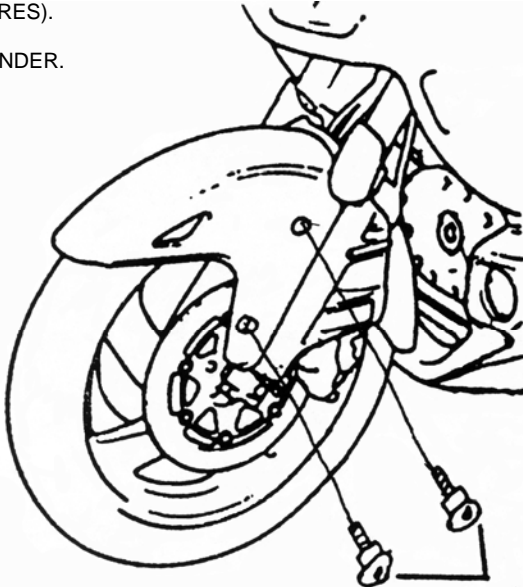

(1A) OEM
SCREWS