## **BIG BIKE PARTS**

## **INSTALLATION INSTRUCTIONS**

Copyright® 2015 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.

PART NO. 52-839

**GPS/PHONE HOLDER** 

## GL1500 AND GL1800, HONDA AND YAMAHA CRUISERS

| 0/-0/-0-0     |                  |                  |                  |             |                      |
|---------------|------------------|------------------|------------------|-------------|----------------------|
| TOOLS NEEDED: | 5MM ALLEN WRENCH | 4MM ALLEN WRENCH | 10MM WRENCH      | THREAD LOCK | PHILLIPS SCREWDRIVER |
|               | 3MM ALLEN WRENCH | 8MM WRENCH       | 2MM ALLEN WRENCH |             |                      |

PLEASE READ THROUGH AND LINDERSTAND THESE INSTRUCTIONS REFORE REGINNING


NOTE: THIS CAN BE MOUNTED ON EITHER THE LEFT OR THE RIGHT SIDE OF MOTORCYCLE. THE INSTRUCTIONS ARE FOR A LEFT SIDE INSTALLATION. USE THREAD LOCK ON ALL FASTENERS.

## INSTALLATION:


3/23/2015


- 1. USING A 5MM ALLEN WRENCH REMOVE THE TWO ALLEN BOLTS THAT HOLD THE CLUTCH LEVER TO THE HANDLEBARS. SEE FIG. 1. THEY WILL NOT BE
- 2 APPLY THREAD LOCK NEAR THE END OF THE TWO M6 X 40MM SCREWS SUPPLIED WITH THE MOUNT.
- 3. ASSEMBLE THE M6 X 40MM SCREWS AND SPACERS AS SHOWN IN FIG. 2.
- 4. USING A 4MM ALLEN WRENCH INSTALL THE MOUNT TO THE BIKE. SEE FIG. 3.
- 5. ASSEMBLE THE RECEIVER TO THE MOUNTING PLATE USING THE M6 X 12MM SCREW, LOCK WASHER, AND LOCK NUT AS SHOWN IN FIG. 4.
- 6. ADJUST THE ANGLE OF THE RECEIVER MOUNT AND TIGHTEN USING A 4MM ALLEN WRENCH AND A 10MM WRENCH.
- 7. GPS/PHONE HOLDER CAN BE ROTATED 90 DEGREES AND MADE WIDER. SEE FIG. 5.
- 8. INSTALL THE SAFETY STRAP BY REMOVING THE TOP PHILLIPS SCREW ON THE BACK AND REINSTALLING IT THROUGH THE HOLE ON THE STRAP. SEE FIG. 6.
- 9. SLIDE THE GPS/PHONE HOLDER INTO THE MOUNT AS SHOWN IN FIG. 7. INSTALL THE M3 SCREW FOR SECURITY.
- 10. TIGHTEN THE SCREWS AND ADJUST THE MOUNT TO THE DESIRED POSITION.
- 11. TURN THE LOCKING KNOB COUNTER CLOCKWISE UNTIL YOU SEE THE SET SCREW ON THE KNOB AND OPEN THE CLAMP. SEE FIG.8.
- 12. SQUEEZE THE CLAMP TOGETHER AND ROTATE THE KNOB CLOCKWISE UNTIL THE ARROWS LINE UP. SEE FIG. 9.
- 13. TIGHTLY WRAP SAFETY STRAP AROUND THE DEVICE BEFORE USE.



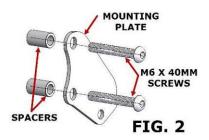



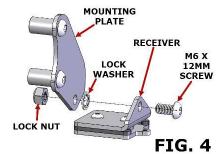

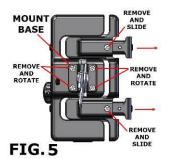











smartphone to view video