## **BIG BIKE PARTS INSTALLATION INSTRUCTIONS** Copyright 2016 by Big Bike Parts, Inc. No part of this PART NO. 52-839A **GPS/PHONE HOLDER** instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc GL1500 AND GL1800, HONDA AND YAMAHA CRUISERS, HARLEY-DAVIDSON® WITH 1.5" OR 1.56" BOLT SPACING 6/8/2016 TOOLS 5MM ALLEN WRENCH (METRIC) 4MM (5/32") ALLEN WRENCH 10MM WRENCH THREAD LOCK PHILLIPS SCREWDRIVER NEEDED:

PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING.

3MM ALLEN WRENCH

NOTE: THIS CAN BE MOUNTED ON EITHER THE LEFT OR THE RIGHT SIDE OF MOTORCYCLE. THE INSTRUCTIONS ARE FOR A LEFT SIDE INSTALLATION. USE REMOVABLE THREAD LOCK ON ALL FASTENERS.

## INSTALLATION:

- 1. REMOVE THE TWO ALLEN BOLTS THAT HOLD THE CLUTCH LEVER TO THE HANDLEBARS. SEE FIG. 1. THEY WILL NOT BE REUSED.
- 2. APPLY THREAD LOCK NEAR THE END OF THE TWO SCREWS SUPPLIED WITH THE MOUNT. (M6 X 40 FOR HONDA AND YAMAHA) (1/4-20 X 1-3/4 FOR H-D)

2MM ALLEN WRENCH

8MM WRENCH

- 3. ASSEMBLE THE SCREWS AND SPACERS AS SHOWN IN FIG. 2.
- 4. USING A 4MM (5/32") ALLEN WRENCH INSTALL THE MOUNT TO THE BIKE. SEE FIG. 3.
- 5. ASSEMBLE THE RECEIVER TO THE MOUNTING PLATE USING THE M6 X 12MM SCREW, LOCK WASHER, AND LOCK NUT AS SHOWN IN FIG. 4.
- 6. ADJUST THE ANGLE OF THE RECEIVER MOUNT AND TIGHTEN USING A 4MM ALLEN WRENCH AND A 10MM WRENCH.
- 7. GPS/PHONE HOLDER CAN BE ROTATED 90 DEGREES AND MADE WIDER. SEE FIG. 5.
- 8. INSTALL THE SAFETY STRAP BY REMOVING THE TOP PHILLIPS SCREW ON THE BACK AND REINSTALLING IT THROUGH THE HOLE ON THE STRAP. SEE FIG. 6.
- 9. SLIDE THE GPS/PHONE HOLDER INTO THE MOUNT AS SHOWN IN FIG. 7. INSTALL THE M3 SCREW FOR SECURITY.

T30 TORX DRIVER (HARLEY)

- 10. TIGHTEN THE SCREWS AND ADJUST THE MOUNT TO THE DESIRED POSITION.
- 11. TURN THE LOCKING KNOB COUNTER CLOCKWISE UNTIL YOU SEE THE SET SCREW ON THE KNOB AND OPEN THE CLAMP. SEE FIG.8.

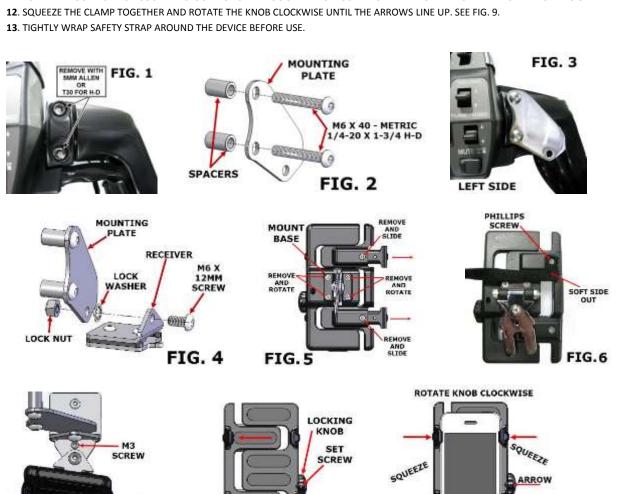


FIG.8



Scan code with your

smartphone to view

FIG. 9