

Copyright © 2016 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.

PART NO. 52-845

LAMPGARD™

RECTANGULAR FOG LIGHTS

REVISED 8/25/2020


TOOLS NEEDED: RUBBING ALCOHOL

LINT FREE TOWEL

PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING.

**INSTALLATION:**

1. CLEAN THE FOG LIGHT LENS AND THE BACK SIDE (SIDE WITH LABEL) OF THE LAMPGARDS WITH RUBBING ALCOHOL AND LET DRY.
2. USE THE FIG. 1 BELOW TO POSITION EACH OF THE FASTENERS (OR CONSUMERS PREFERENCE). PLACE 3 ON EACH LAMPGARD.
3. PLACE THE MATES FOR THE DUAL LOCK FASTENER TO THE ONES ON THE LAMPGARD. (NOTE: THESE DUAL LOCKS MATE TO EACH OTHER.)
4. PLACE THE LAMPGARD ON THE FOG SO THE DUAL LOCK FASTENERS STICK TO THE FOG LIGHT LENS. ONCE IN PLACE, REMOVE THE LAMPGARD LEAVING THE MATE OF THE DUAL LOCK FASTENERS ON THE FOG LIGHT AND THE OTHER MATE ON THE LAMPGARD. THE DUAL LOCK FASTENERS NEED TO SIT ON THE LAMPGARD AND ON THE BIKE FOR 24 HOURS BEFORE EXPOSED TO WEATHER OR LOAD FOR PROPER ADHESION OF THE TAPE.

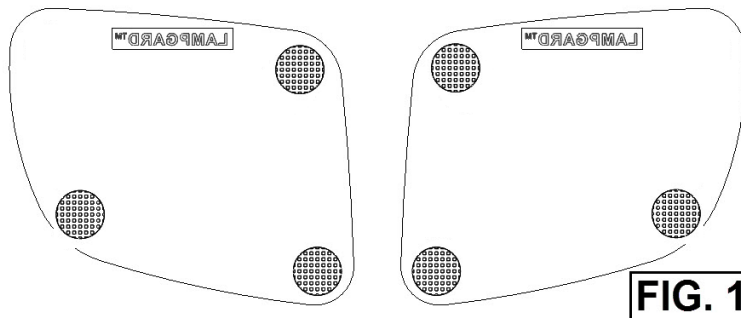

Copyright © 2016 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.

PART NO. 52-845

LAMPGARD™

RECTANGULAR FOG LIGHTS

REVISED 8/25/2020

TOOLS NEEDED: RUBBING ALCOHOL

LINT FREE TOWEL

PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING.

**INSTALLATION:**

1. CLEAN THE FOG LIGHT LENS AND THE BACK SIDE (SIDE WITH LABEL) OF THE LAMPGARDS WITH RUBBING ALCOHOL AND LET DRY.
2. USE THE FIG. 1 BELOW TO POSITION EACH OF THE FASTENERS (OR CONSUMERS PREFERENCE). PLACE 3 ON EACH LAMPGARD.
3. PLACE THE MATES FOR THE DUAL LOCK FASTENER TO THE ONES ON THE LAMPGARD. (NOTE: THESE DUAL LOCKS MATE TO EACH OTHER.)
4. PLACE THE LAMPGARD ON THE FOG SO THE DUAL LOCK FASTENERS STICK TO THE FOG LIGHT LENS. ONCE IN PLACE, REMOVE THE LAMPGARD LEAVING THE MATE OF THE DUAL LOCK FASTENERS ON THE FOG LIGHT AND THE OTHER MATE ON THE LAMPGARD. THE DUAL LOCK FASTENERS NEED TO SIT ON THE LAMPGARD AND ON THE BIKE FOR 24 HOURS BEFORE EXPOSED TO WEATHER OR LOAD FOR PROPER ADHESION OF THE TAPE.

