

Copyright © 2019 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.

PART NO. 52-958

COMMANDER PASSENGER INSERT SET

FITMENT:

HONDA GOLDWING/GOLDWING TOUR 2018-NEWER

9/30/2019

TOOLS NEEDED: DISH SOAP

WATER

CLEAN TOWEL



RULER/STRAIGHT EDGE

PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING.

ESTIMATED INSTALLATION TIME: 15 TO 20 MIN.

INSTALLATION:

1. STARTING ON THE LEFT SIDE REMOVE THE OEM RUBBER INSERT BY PULLING UP ON THE BACK CORNER AND PULLING IT UP AND FORWARD. SEE FIG. 1
2. USING A CLEAN TOWEL REMOVE ALL DIRT OR DEBRIS FROM THE TOP OF THE INSERT MOUNTING PLATE.
3. MIX A COUPLE OF OUNCES OF WATER WITH TWO DROPS OF DISH SOAP.
4. PUT SOME OF THE SOAPY WATER ON THE TOP OF THE INSERT MOUNTING PLATE AS SHOWN IN FIG. 2.
5. PLACE THE LEFT COMMANDER INSERT ONTO THE INSERT MOUNTING PLATE AND LINE UP ALL OF THE RUBBER DARTS WITH THE HOLES. SEE FIG. 3.
6. STARTING FROM THE REAR OF THE FOOTREST PRESS DOWN ON THE TOP OF THE COMMANDER INSERT. SEE FIG. 4. YOU WILL FEEL THE RUBBER DARTS LOCKING INTO THE BIKE AS YOU WORK YOUR WAY FROM THE BACK TO THE FRONT OF THE FOOTREST.
7. USING A RULER OR A STRAIGHT EDGE CHECK THE TOP SURFACE OF THE INSERT TO MAKE SURE IT IS FULLY LOCKED INTO PLACE. SEE FIG. 5.
8. REPEAT STEPS 1 THROUGH 7 ON THE RIGHT SIDE.
9. WIPE OFF ANY EXTRA SOAPY WATER.

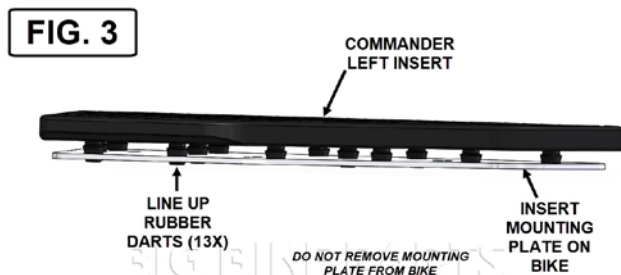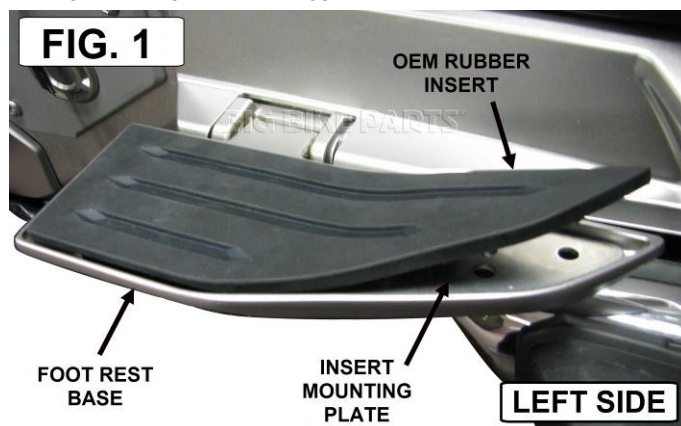

NOTICE

IGNORING THE CONTENTS OF THESE INSTRUCTIONS MAY AFFECT THE PRODUCT PERFORMANCE AND FUNCTIONALITY. NOT FOLLOWING THESE INSTRUCTION MAY CAUSE DAMAGE TO THE PRODUCT OR THE VEHICLE TO WHICH IT IS BEING ATTACHED.